



CORDIC IP Core - Lattice Radiant Software

User Guide

FPGA-IPUG-02136-1.3

November 2022

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS, with all faults and associated risk the responsibility entirely of the Buyer. Buyer shall not rely on any data and performance specifications or parameters provided herein. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. No Lattice products should be used in conjunction with mission- or safety-critical or any other application in which the failure of Lattice's product could create a situation where personal injury, death, severe property or environmental damage may occur. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Contents

| | |
|---|----|
| Acronyms in This Document..... | 5 |
| 1. Introduction..... | 6 |
| 1.1. Quick Facts | 6 |
| 1.2. Features | 6 |
| 1.3. Conventions | 7 |
| 1.3.1. Nomenclature..... | 7 |
| 1.3.2. Signal Names | 7 |
| 1.4. Attributes | 7 |
| 2. Functional Description..... | 8 |
| 2.1. General Description of the CORDIC Algorithm..... | 8 |
| 2.2. Block Diagram | 10 |
| 2.2.1. Data Path | 10 |
| 2.2.2. CORDIC Functions..... | 11 |
| 2.3. Signal Description..... | 13 |
| 2.4. Attributes Summary | 14 |
| 2.5. Configuring the CORDIC IP Core..... | 15 |
| 2.5.1. Basic Options..... | 15 |
| 2.5.2. Advanced Options | 16 |
| 2.6. Timing Descriptions..... | 18 |
| 3. IP Generation, Simulation, and Validation | 20 |
| 3.1. Generating the IP | 20 |
| 3.2. Running Functional Simulation | 23 |
| 3.3. IP Evaluation..... | 25 |
| 4. Ordering Part Number | 26 |
| Appendix A. Resource Utilization | 27 |
| References..... | 30 |
| Technical Support Assistance | 31 |
| Revision History | 32 |

Figures

| | |
|---|----|
| Figure 2.1. CORDIC IP Core Block Diagram | 10 |
| Figure 2.2. Vector Rotation..... | 11 |
| Figure 2.3. Vector Translation..... | 12 |
| Figure 2.4. Top-Level Interface for CORDIC IP Core..... | 13 |
| Figure 2.5. Basic CORDIC Arithmetic Unit..... | 15 |
| Figure 2.6. Timing Diagram for Parallel CORDIC (Rotation Mode) with Continuous Inputs | 18 |
| Figure 2.7. Timing Diagram for Parallel CORDIC (Sin/Cos Mode) with Gap Inputs..... | 18 |
| Figure 2.8. Timing Diagram for Serial CORDIC (Translation Mode) | 19 |
| Figure 3.1. Module/IP Block Wizard | 20 |
| Figure 3.2. Configure User Interface of CORDIC IP Core..... | 21 |
| Figure 3.3. Check Generating Result..... | 22 |
| Figure 3.4. Simulation Wizard..... | 23 |
| Figure 3.5. Adding and Reordering Source | 24 |
| Figure 3.6. Simulation Waveform | 24 |

Tables

| | |
|---|----|
| Table 1.1. Quick Facts | 6 |
| Table 2.1. Vector Rotation Input/Output | 11 |
| Table 2.2. Vector Translation Input/Output | 12 |
| Table 2.3. Sin and Cos Input/Output | 12 |
| Table 2.4. Arctan Input/Output | 13 |
| Table 2.5. CORDIC IP Core Signal Description..... | 13 |
| Table 2.6. Attributes Table | 14 |
| Table 2.7. Attributes Descriptions | 15 |
| Table 2.8. Round Method | 16 |
| Table 3.1. Generated File List | 22 |
| Table A.1. Resource Utilization | 27 |
| Table A.2. Resource Utilization | 27 |
| Table A.3. Resource Utilization | 28 |
| Table A.4. Resource Utilization | 28 |
| Table A.5. Resource Utilization | 29 |

Acronyms in This Document

A list of acronyms used in this document.

| Acronym | Definition |
|---------|--------------------------------------|
| CORDIC | Coordinate Rotation Digital Computer |
| FPGA | Field Programmable Gate Array |
| IP | Intellectual Property |
| LSB | Least Significant Bit |
| MSB | Most Significant Bit |
| RTL | Register Transfer Level |

1. Introduction

This user guide provides a description of Lattice’s Coordinate Rotation Digital Computer (CORDIC) IP core. The CORDIC IP Core is configurable and supports several functions, including rotation, translation, sin and cos, and arctan. Two architecture configurations are supported for the arithmetic unit: parallel, in which the output data is calculated in a single clock cycle, and word-serial, in which the output data is calculated over multiple clock cycles. The input and output data widths and computation iterative numbers are configurable over a wide range of values. The IP core uses full precision arithmetic internally while supporting variable output precision and several choices of rounding algorithms.

1.1. Quick Facts

Table 1.1 presents a summary of the CORDIC IP Core.

Table 1.1. Quick Facts

| | | |
|-----------------------------|--|--|
| IP Requirements | Supported FPGA Family | CrossLink™-NX, Certus™-NX, CertusPro™-NX, MachXO5™-NX, Lattice Avant |
| Resource Utilization | Targeted Devices | LIFCL-40, LIFCL-17, LFD2NX-40, LFD2NX-17, LFPCPX-100, LFMXO5-25, LAV-AT-500E |
| | Resources | See Table A.1 and Table A.2 . |
| Design Tool Support | Lattice Implementation | IP Core v1.x.x – Lattice Radiant™ software 2.1 or later |
| | Synthesis | Lattice Synthesis Engine |
| | | Synopsys® Synplify Pro® for Lattice |
| Simulation | For a list of supported simulators, see the Lattice Radiant software user guide. | |

1.2. Features

The key features of CORDIC IP Core include:

- Functional configurations
 - Vector rotation (Polar to rectangular)
 - Vector translation (Rectangular to Polar)
 - Sin and Cos
 - Arctan
- Input data widths from 8 to 32 bits
- Iterative number from 4 to 32
- Optional pre-rotation module
- Optional amplitude compensation scaling module to compensate for CORDIC algorithm’s output amplitude scale factor
- Selectable rounding : Truncation, Rounding Up, Rounding away from zero, Convergent Rounding
- Parallel architectural configuration for high throughput
- Word serial architectural configuration for small area
- Signed 2’s complement data
- Optional control signals: ce_i and sr_i
- Full precision arithmetic

1.3. Conventions

1.3.1. Nomenclature

The nomenclature used in this document is based on Verilog HDL.

1.3.2. Signal Names

Signal Names that end with:

- `_n` are active low
- `_i` are input signals
- `_o` are output signals
- `_io` are bi-directional input/output signals

1.4. Attributes

The names of attributes in this document are formatted in title case and italicized (*Attribute Name*).

2. Functional Description

2.1. General Description of the CORDIC Algorithm

The CORDIC algorithm is an iterative method that uses simple arithmetic operations such as addition, subtraction, bit shift and table look up to perform hyperbolic and trigonometric functions. The CORDIC algorithm was initially designed to perform a vector rotation, where the vector (x, y) is rotated through the angle θ yielding a new vector (x', y') . Using a matrix form, a planar rotation for a vector of (x, y) is defined as:

$$\begin{aligned} x' &= x \cos \theta - y \sin \theta \\ y' &= y \cos \theta + x \sin \theta \end{aligned} \quad (1)$$

Note: θ is the angle to be traversed. With the CORDIC algorithm, the traversal is accomplished in iterative steps in which each step completes a small part of the rotation.

A single step is defined by the following equation:

$$\begin{aligned} x_{i+1} &= \cos \theta_i (x_i - y_i \tan \theta_i) \\ y_{i+1} &= \cos \theta_i (y_i + x_i \tan \theta_i) \end{aligned} \quad (2)$$

The number of multipliers required is reduced by selecting the angle steps such that the tangent of a step is a power of 2. The angle for each step is given by:

$$\theta_i = \arctan \left(\frac{1}{2^i} \right) \quad (3)$$

Multiplying or dividing by a power of 2 can be implemented using a simple shift operation. All iteration-angles summed must equal the rotation angle θ .

$$\sum_{i=0}^{\infty} d_i \theta_i \text{ where } d_i = \{-1; +1\} \quad (4)$$

This results in the following equation for $\tan \theta_i$:

$$\tan \theta_i = d_i 2^{-i} \quad (5)$$

Combining equations 2 and 5 results in:

$$\begin{aligned} x_{i+1} &= \cos \theta_i (x_i - y_i d_i 2^{-i}) \\ x_{i+1} &= \cos \theta_i (y_i + x_i d_i 2^{-i}) \end{aligned} \quad (6)$$

The iterative rotation can now be expressed as:

$$\begin{aligned} x_{i+1} &= K_i(x_i - y_i d_i 2^{-i}) \\ y_{i+1} &= K_i(y_i + x_i d_i 2^{-i}) \end{aligned} \quad (7)$$

where

$$\begin{aligned} K_{i+1} &= \cos(\tan^{-1} 2^{-i}) = \frac{1}{\sqrt{1 + 2^{-2i}}} \\ d_i &= \pm 1 \end{aligned}$$

The CORDIC rotator is normally operated in one of two modes. The first, called rotation, rotates the input vector by a specified angle. The second mode, called vectoring, rotates the input vector to the x-axis while recording the angle required to make that rotation.

For rotation mode, the CORDIC equations are:

$$\begin{aligned} x_{i+1} &= x_i - y_i d_i 2^{-i} \\ y_{i+1} &= y_i - x_i d_i 2^{-i} \\ z_{i+1} &= z_i - d_i \tan^{-1}(2^{-i}) \end{aligned} \quad (8)$$

where $d_i = -1$ if $z_i < 0$, $+1$ otherwise. Here z_i is the residual angle in the angle accumulator with the initial value z_0 as the angle to be rotated.

In vectoring mode, the CORDIC vectoring function works by seeking to minimize the y component of the residual vector at each rotation. The sign of the residual component is used to determine which direction to rotate next. If the angle accumulator is initialized with zero, it will contain the traversed angle at the end of the iterations. For vectoring mode, the CORDIC equations are:

$$\begin{aligned} x_{i+1} &= x_i - y_i d_i 2^{-i} \\ y_{i+1} &= y_i - x_i d_i 2^{-i} \\ z_{i+1} &= z_i - d_i \tan^{-1}(2^{-i}) \end{aligned} \quad (9)$$

where $d_i = -1$ if $y_i < 0$, $+1$ otherwise

In sin/cos mode, the unit vector is rotated by the input phase angle θ , generating the output vector $(\cos(\theta), \sin(\theta))$. The rotation mode CORDIC operation can simultaneously compute the sine and cosine of the input angle θ . Setting the x component to 1 and y component to zero reduces the rotation mode. This results the equations 10 from equations 1:

$$\begin{aligned} x' &= \cos\theta \\ y' &= \sin\theta \end{aligned} \quad (10)$$

In arctangent mode, $\theta = \arctan(y_0/x_0)$ is directly computed using the vectoring mode if the angle accumulator is initialized with zero.

$$z_n = z_0 + \arctan\left(\frac{y_0}{x_0}\right) \quad (11)$$

2.2. Block Diagram

The CORDIC IP core block diagram is shown in [Figure 2.1](#).

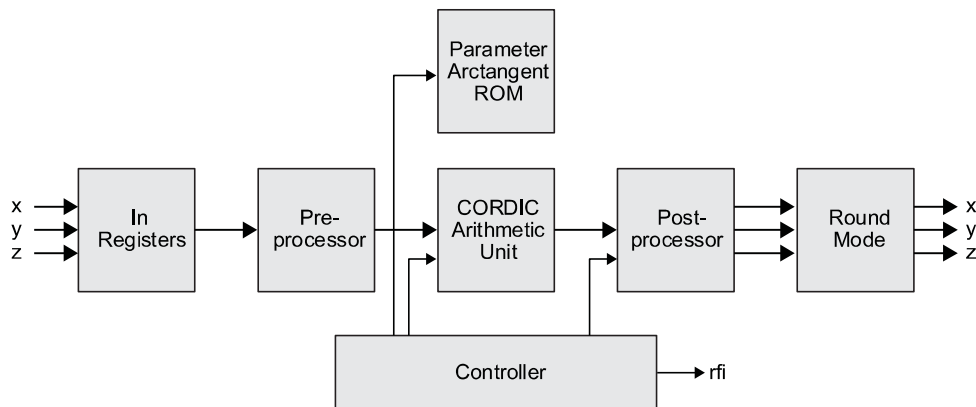


Figure 2.1. CORDIC IP Core Block Diagram

2.2.1. Data Path

2.2.1.1. Pre-processor

The CORDIC rotation and vectoring algorithms are limited to rotation angles between $-\pi/2$ and $\pi/2$. This limitation is due to the use of 2° for the tangent in the first iteration. For composite rotation angles larger than $\pi/2$, an additional rotation is required.

2.2.1.2. CORDIC Arithmetic Unit

The CORDIC arithmetic unit performs the actual CORDIC algorithm. Two architecture configurations are available for the arithmetic unit: parallel (with single-cycle data throughput) and word-serial (with multiple-cycle throughput). The parallel configuration has a pipeline-structured core and can perform a CORDIC transformation each clock cycle, producing a new output every cycle. In contrast with the parallel structure, word-serial architecture produces a new output every N cycles. Here N is the user input in the Radiant GUI interface for the Iteration Number parameter.

2.2.1.3. Arctan ROM

The arc tangent ROM stores the $\tan^{-1}(2^{-i})$ values. Its data width is variable, address width is $\log_2(\text{number of iterations}-1)$, address depth is $2^{\log_2(\text{number of iterations}-1)}$.

2.2.1.4. Controller

The controller module control generates all signals necessary for carrying out the iterations, including ROM addressing, ready for input (rfi) and output valid (outvalid). I/O port definition details are explained in [Table 2.5](#).

2.2.1.5. Post-processor

The CORDIC algorithm introduces a scale factor that causes a magnitude gain that must be compensated for at the end. See Equation 7 in the [General Description of the CORDIC Algorithm](#) section. The post-processor module contains logic to correct the scale factor. In addition, it corrects the phase rotation introduced by the pre-processor module (if present).

2.2.1.6. Rounding

The rounding module provides four types of rounding, depending on the Rounding Method parameter:

- None (Truncation) – Discards all bits to the right of the output least significant bit and leaves the output uncorrected.
- Rounding up – Rounds up if the fractional part is exactly one-half.
- Rounding away from zero – Rounds away from zero if the fractional part is exactly one-half.
- Convergent rounding – Rounds to the nearest even value if the fractional part is exactly one-half.

2.2.2. CORDIC Functions

2.2.2.1. Vector Rotation

Polar to Rectangular Translation: In vector rotation mode, the input vector (x,y) is rotated by a specified angle, θ , giving a new output vector, (x', y') . Because of the CORDIC algorithm scale factor, a magnitude gain is introduced as shown in Figure 2.2. This magnitude gain is compensated for by the CORDIC IP post-processor module.

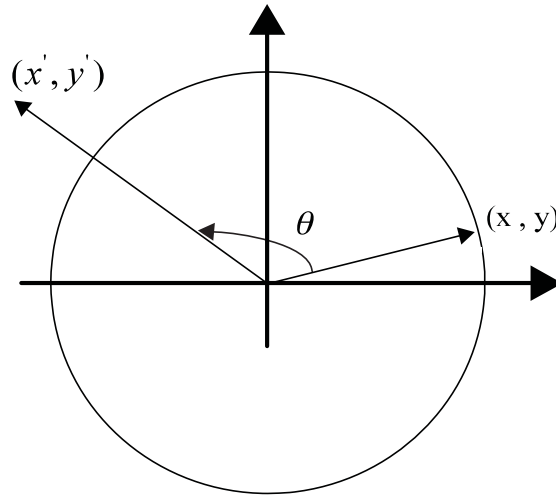


Figure 2.2. Vector Rotation

The inputs, x_{in_i} , y_{in_i} and $phase_{in_i}$, are limited to the ranges provided in Table 2.1. Inputs outside the ranges will produce unpredictable results.

Table 2.1. Vector Rotation Input/Output

| Signal | Description |
|-----------------|---|
| x_{in_i} | Input X Coordinate Range: $-1 \leq x_{in_i} \leq 1$ |
| y_{in_i} | Input Y Coordinate Range: $-1 \leq y_{in_i} \leq 1$ |
| $phase_{in_i}$ | Input Rotation Angle Range: $-\pi \leq phase_{in_i} \leq \pi$ |
| x_{out_o} | Output X Coordinate Range: $-\sqrt{2} \leq x_{out_o} \leq \sqrt{2}$ |
| y_{out_o} | Output Y Coordinate Range: $-\sqrt{2} \leq y_{out_o} \leq \sqrt{2}$ |

2.2.2.2. Vector Translation

Rectangular to Polar Translation: In vector translation mode, the input vector (x,y) is rotated through whatever angle is necessary to align the result vector with the x-axis, as shown in Figure 2.3. Output is the angle rotated and the magnitude on the x-axis after rotation.

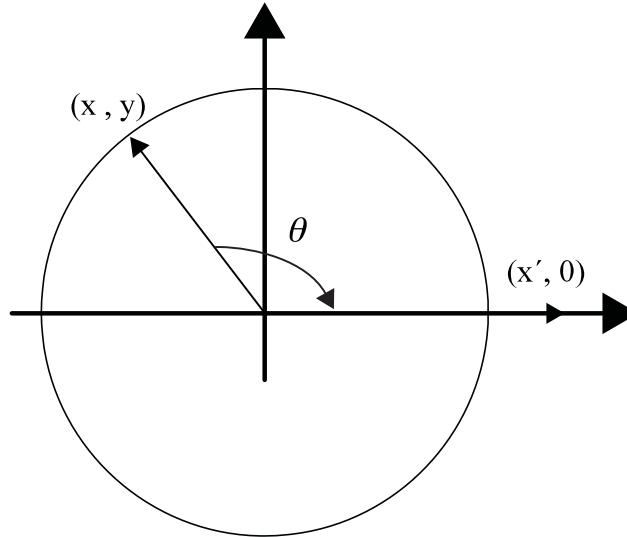


Figure 2.3. Vector Translation

The inputs, xin_i and yin_i are limited to the ranges provided in Table 2.2. Inputs outside the ranges will produce unpredictable results.

Table 2.2. Vector Translation Input/Output

| Signal | Description |
|---------------|---|
| xin_i | Input X Coordinate Range: $-1 \leq xin_i \leq 1$ |
| yin_i | Input Y Coordinate Range: $-1 \leq yin_i \leq 1$ |
| $xout_o$ | Output Magnitude Range: $-\sqrt{2} \leq xout_o \leq \sqrt{2}$ |
| $phaseout_o$ | Output Phase Range: $-\pi \leq phaseout_o \leq \pi$ |

2.2.2.3. Sin and Cos

In sin/cos mode, the unit vector is rotated by the input phase angle θ providing the output vector $(\cos(\theta), \sin(\theta))$. The input angle, $phasein_i$, is limited to the range provided in Table 2.3. Inputs outside this range will produce unpredictable results.

Table 2.3. Sin and Cos Input/Output

| Signal | Description |
|--------------|--|
| $phasein_i$ | Input Phase Range: $-\pi \leq phasein_i \leq \pi$ |
| $xout_o$ | Output $\cos(\theta)$ Range: $-1 \leq xout_o \leq 1$ |
| $yout_o$ | Output $\sin(\theta)$ Range: $-1 \leq yout_o \leq 1$ |

2.2.2.4. Arctan

In arctan mode, the input vector, (x, y) is rotated until the y component is zero, yielding the output angle, (y/x). The inputs `xin_i` and `yin_i` are limited to the ranges given in [Table 2.4](#). Inputs outside the ranges will produce unpredictable results.

Table 2.4. Arctan Input/Output

| Signal | Description |
|-------------------------|--|
| <code>xin_i</code> | Input X Coordinate Range: $-1 \leq xin_i \leq 1$ |
| <code>yin_i</code> | Input Y Coordinate Range: $-1 \leq yin_i \leq 1$ |
| <code>phaseout_o</code> | Output Phase Range: $-\pi \leq phaseout_o \leq \pi$ |

2.3. Signal Description

The top-level interface diagram for the CORDIC IP Core is shown in [Figure 2.4](#).

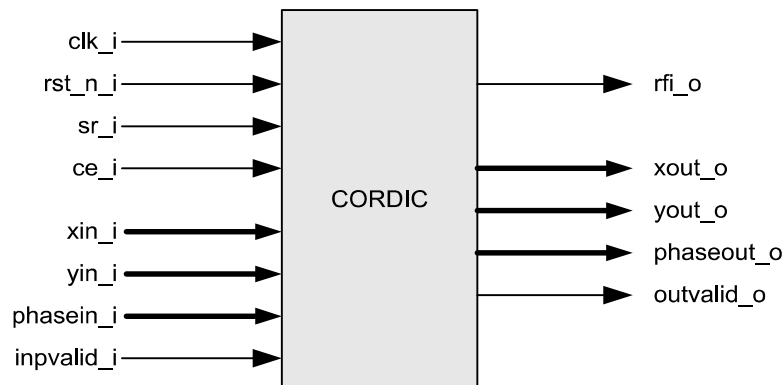


Figure 2.4. Top-Level Interface for CORDIC IP Core

[Table 2.5](#) lists the input and output signals for CORDIC IP Core.

Table 2.5. CORDIC IP Core Signal Description

| Port Name | I/O | Size | Description |
|------------------------|-----|---|---|
| Clock and Reset | | | |
| <code>clk_i</code> | I | 1 | System clock for data and control inputs and outputs. |
| <code>rst_n_i</code> | I | 1 | System wide asynchronous active-low reset signal. |
| General I/O | | | |
| <code>xin_i</code> | I | Width depends on <i>Input data width</i> | X component of input sample, Will be available for <i>Mode</i> other than Sin/Cos |
| <code>yin_i</code> | I | Width depends on <i>Input data width</i> | Y component of input sample, Will be available for <i>Mode</i> other than Sin/Cos |
| <code>phasein_i</code> | I | Width depends on <i>Input data width</i> | Phase component of input sample, Will be available for <i>Mode</i> Rotation or Sin/Cos |
| <code>inpvaid_i</code> | I | 1 | Input valid signal. The input data is read-in only when <code>inpvaid_i</code> is high. |
| <code>xout_o</code> | O | Width depends on <i>Output data width</i> | X component of output sample, Will be available for <i>Mode</i> other than Arctan |
| <code>yout_o</code> | O | Width depends on <i>Output data width</i> | Y component of output sample, Will be available for <i>Mode</i> Rotation or Sin/Cos |

| | | | |
|---------------------|---|---|---|
| phaseout_o | O | Width depends on <i>Output data width</i> | Phase component of output sample, Will be available for <i>Mode Translation</i> or <i>Arctan</i> |
| outvalid_o | O | 1 | Output data qualifier. Output data is valid only when this signal is high. |
| rfi_o | O | 1 | Ready for input. This output, when high, indicates that the IP core is ready to receive the next input data. A valid data may be applied at <i>xin_i</i> , <i>yin_i</i> and <i>phasein_i</i> only if <i>rfi_o</i> was high during the previous clock cycle. |
| Optional I/O | | | |
| ce_i | I | 1 | Clock Enable. Applicable when <i>Clock enable</i> is Checked. |
| sr_i | I | 1 | Synchronous Reset, Applicable when <i>Synchronous reset</i> is Checked. |

2.4. Attributes Summary

Table 2.6. Attributes Table

| Attribute | Selectable Values | Default | Dependency on Other Attributes |
|-------------------------|---|------------|--------------------------------|
| Basic Options | | | |
| Mode | Rotation, Translation, Sin/Cos, Arctan | Rotation | — |
| Architecture | Word-Serial, Parallel | Parallel | — |
| Number of iterations | 4–32 | 16 | — |
| Compensation | None, LUT-Based, DSP-Based | None | — |
| Pre-Rotation | Checked, Unchecked | Checked | — |
| Advanced Options | | | |
| Rounding Method | Truncation, Rounding up, Rounding away from zero, Convergent rounding | Truncation | — |
| Input data width | 8–32 | 16 | — |
| Output data width | 8–32 | 16 | — |
| Optional Ports | | | |
| Synchronous reset | Checked, Unchecked | Unchecked | — |
| Clock enable | Checked, Unchecked | Unchecked | — |

Table 2.7. Attributes Descriptions

| Attribute | Description |
|-------------------------|--|
| Basic Options | |
| Mode | Specifies whether the CORDIC is: rotate, translate, sin and cos, arctan. |
| Architecture | Specifies two architecture configurations for the CORDIC IP Core: Parallel, with single cycle data throughput, and Word-serial, with multiple cycles throughput. |
| Number of iterations | Specifies the number of internal add-sub iterations to perform |
| Compensation | Specifies three compensation configurations for CORDIC magnitude scaling. The outputs are compensated using a LUT-based multiplier or using the Block multiplier |
| Pre-Rotation | Specifies whether the core is instantiation of the pre-rotation module. |
| Advanced Options | |
| Rounding Method | Specifies the rounding method when there is a need to drop one or more LSBs from the true output. |
| Input data width | Input data width of CORDIC IP Core. |
| Output data width | Output data width of CORDIC IP Core. |
| Optional Ports | |
| Synchronous reset | Specifies if a synchronous reset port is needed in the IP. Synchronous reset signal resets all the registers in the CORDIC IP Core. |
| Clock enable | Specifies if a clock enable port is needed in the IP. Clock enable control can be used for power saving when the core is not used. Use of clock enable port increases the resource utilization and may affect the performance due to the increased routing congestion. |

2.5. Configuring the CORDIC IP Core

2.5.1. Basic Options

The options for mode, architecture, number of iterations and compensation are independent and specified in the Basic Options tab of the interface.

2.5.1.1. Architecture specification

The CORDIC IP Core provides two architecture configurations for the arithmetic unit: parallel (with single cycle data throughput) and word-serial (with multiple-cycle throughput). Because of the pipelined structure, the CORE can perform a CORDIC transformation each clock cycle, thus producing a new output every cycle. In contrast with parallel structures, word-serial architecture produces a new output every N cycles. Figure 2.5 shows a basic CORDIC arithmetic unit.

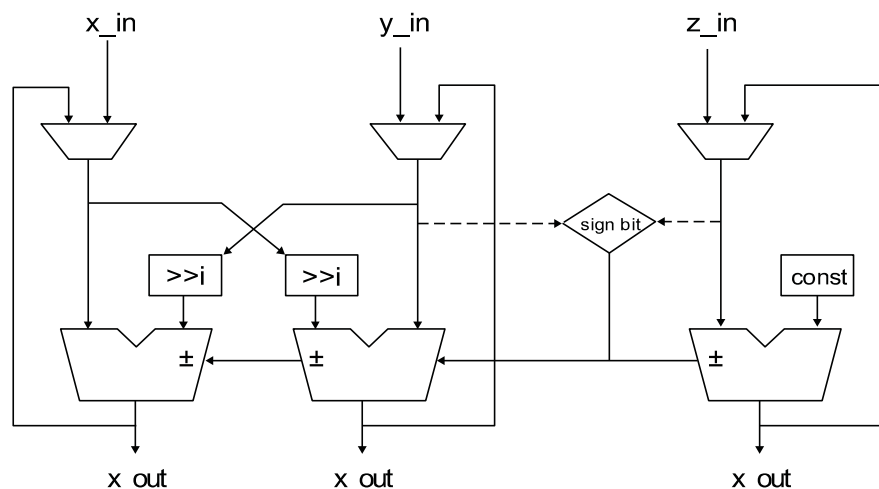


Figure 2.5. Basic CORDIC Arithmetic Unit

2.5.1.2. Iterations Specification

Parameter iteration specifies the number of internal add-sub iterations performed by the CORDIC processor in deriving the result. It determines the accuracy of the output: if the number is larger, the accuracy of the output is higher.

2.5.1.3. Pre-rotation Specification

When the pre-rotation module is selected, the CORDIC operational range extends to the full circle; otherwise the operational range is limited between $-\pi/2$ and $\pi/2$. Angle ranges outside the ranges will produce an unpredictable result if the pre-rotation module is not selected. The following describes an initial pre-rotation $\pm\pi/2$:

$$\begin{aligned} x' &= d \cdot y \\ y' &= d \cdot x \\ z' &= z + d \cdot \frac{\pi}{2} \end{aligned} \quad (12)$$

2.5.1.4. Compensation Specification

In the CORDIC algorithm, the magnitude outputs, xout_o and yout_o, are generated with a magnitude gain. The compensation module provides three configurations to compensate for the CORDIC magnitude scale factor.

- None – The outputs xout_o and yout_o will not be compensated. It is the user’s obligation to compensate and scale for the magnitude outputs gain introduced by the CORDIC algorithm. Refer to General Description of the CORDIC Algorithm of this document for details, especially the K factor in Equation.
- LUT-based – The outputs xout_o and yout_o are compensated using a LUT-based multiplier.
- DSP-based – The outputs xout_o and yout_o are compensated using a DSP-based multiplier

2.5.2. Advanced Options

The controls in this tab are used to define the various data widths and rounding methods used in the data path. The widths of the input data and output data can be defined independently.

2.5.2.1. Round Method Specification

The CORDIC IP Core provides four rounding modes. Examples of round method are provided in [Table 2.8](#).

- Truncation – The outputs, xout_o, yout_o and phaseout_o, are truncated. The LSBs are removed to match the specified output width.
- Rounding up – The outputs, xout_o, yout_o and phaseout_o, are rounded up (0.5 rounded up).
- Rounding away from zero – The outputs, xout_o, yout_o and phaseout_o, are rounded (0.5 rounded up, -0.5 rounded down).
- Convergent rounding – The outputs, xout_o, yout_o and phaseout_o, are rounded towards the nearest even number.

Table 2.8. Round Method

| Value | Truncation | Rounding Up | Rounding Away from Zero | Convergent Rounding |
|-------|------------|-------------|-------------------------|---------------------|
| 1.50 | 1 | 2 | 2 | 2 |
| -1.50 | -2 | -1 | -2 | -2 |
| 0.50 | 0 | 1 | 1 | 0 |
| -0.50 | -1 | 0 | -1 | 0 |
| 0.25 | 0 | 0 | 0 | 0 |
| -0.25 | -1 | 0 | 0 | 0 |
| 0.65 | 0 | 1 | 1 | 0 |

2.5.2.2. Input/Output Width Specification

The input/output data widths can be configured in the range 8 to 32 bits.

2.5.2.3. Data Format Specification

The data signals are: `xin_i`, `yin_i`, `xout_o` and `yout_o`. The input data signals, `xin_i` and `yin_i`, must be in the range $[-1,1]$. Input data outside the range will produce unpredictable results.

- Input Data Signals

Input data signals are represented in decimal format using bus format (as little endian). For N-bit input data signal, the (N-2) LSB represent the fractional component to the left of the decimal place and the MSB represents the sign bit.

For example, when the *Input data width* is 8, +1 and -1 are represented as:

```
01000000 => 01.000000 => +1.0
11000000 => 11.000000 => -1.0
```

When the *Input data width* is 12, +1 and -1 are represented as:

```
010000000000 => 01.0000000000 => +1.0
110000000000 => 11.0000000000 => -1.0
```

- Output Data Signals

If *Compensation* is LUT-based or DSP-based, the output data signal format is the same as the input data signal format. The range of the output data signal is $[-\sqrt{2}, \sqrt{2}]$.

For N-bit output data signal, the (N-2) LSB represent the fractional component to the left of the decimal place and the MSB represents the sign bit.

For example, when the *Output data width* is 8, in the data format, +1 and -1 are represented:

```
01000000 => 01.000000 => +1.0
11000000 => 11.000000 => -1.0
```

When the *Output data width* is 12, in the data format, +1 and -1 are represented:

```
010000000000 => 01.0000000000 => +1.0
110000000000 => 11.0000000000 => -1.0
```

If *Compensation* is None, the output data signals format is different from the input data signals. Due to the magnitude gain introduced by the CORDIC algorithm, without the compensation, the range of the output data signal can be larger than 2 or less than -2, so it will need 2 bits to represent the decimal number.

For the N-bit output data signal, the (N-3) LSB represent the fractional component to the left of the decimal place and the MSB represents the sign bit.

For example, when the *Output data width* is 8, in the data format, +1 and -1 are represented:

```
00100000 => 001.00000 => +1.0
11000000 => 111.00000 => -1.0
```

When the *Output data width* is 12, in the data format, +2 and -2 are represented:

```
010000000000 => 010.000000000 => +2.0
110000000000 => 110.000000000 => -2.0
```

+2.25 and -2.25 are represented:

```
010010000000 => 010.010000000 => +2.25
101110000000 => 101.110000000 => -2.25
```

2.5.2.4. Phase Format Specification

- Phase Signals

The phase signals are `phasein_i` and `phaseout_o`. The input phase signal, `phasein_i`, must be in the range $[-\pi, \pi]$. Input phase outside this range will produce unpredictable results.

The phase signals, `phasein_i` and `phaseout_o`, are always the same representation.

For N-bit phase signal, the (N-3) LSB represents the fractional component to the left of the decimal place and the MSB represents the sign bit.

2.6. Timing Descriptions

Timing diagrams for the CORDIC IP Core are shown in [Figure 2.6](#), [Figure 2.7](#), and [Figure 2.8](#).

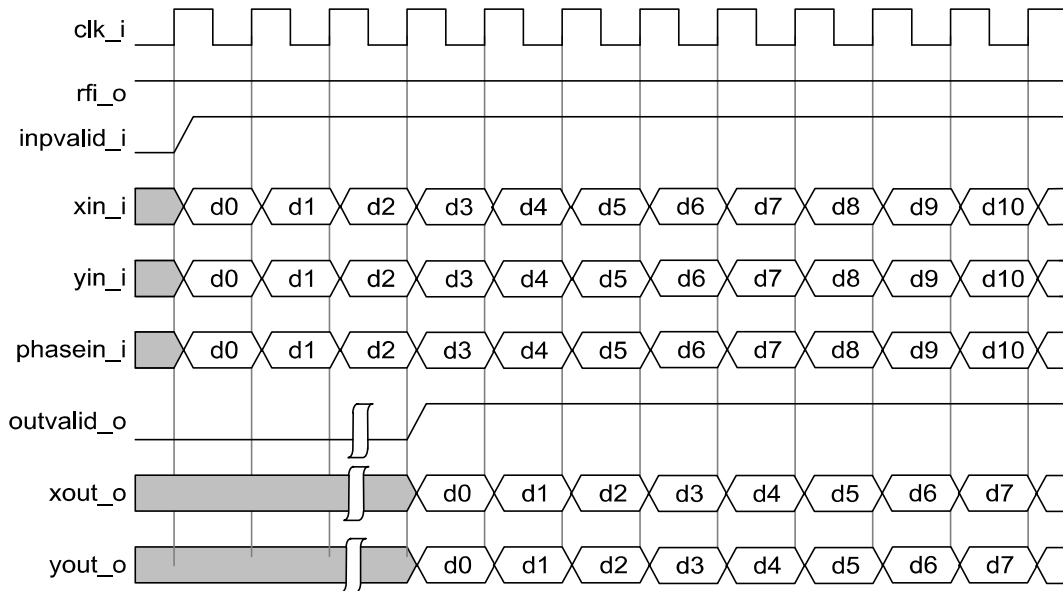


Figure 2.6. Timing Diagram for Parallel CORDIC (Rotation Mode) with Continuous Inputs

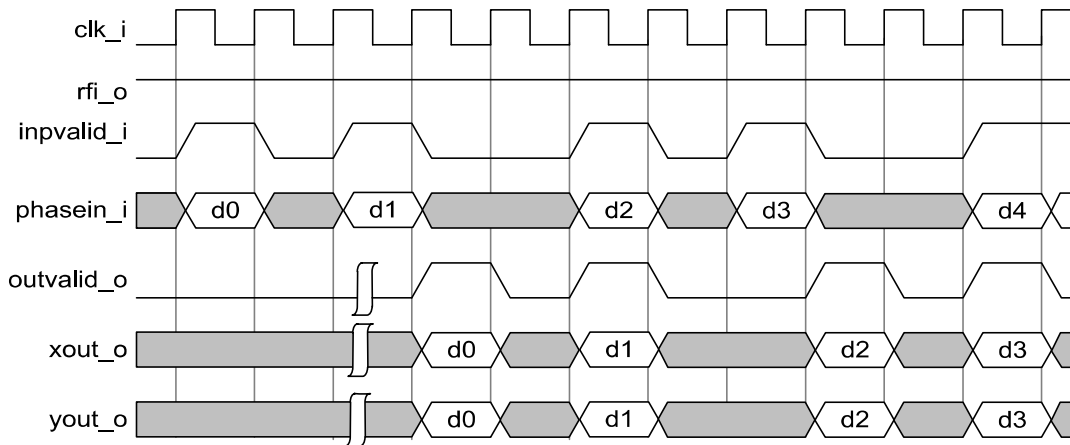


Figure 2.7. Timing Diagram for Parallel CORDIC (Sin/Cos Mode) with Gap Inputs

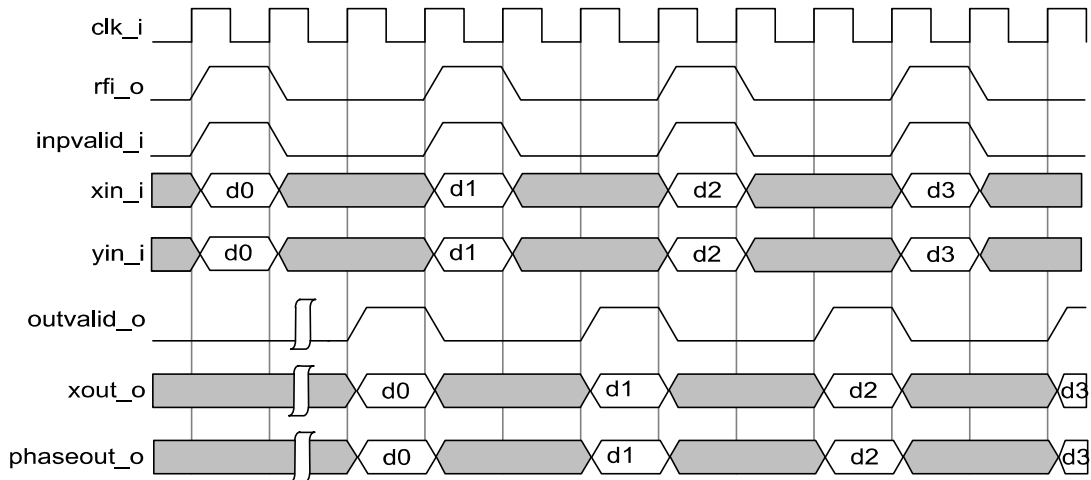


Figure 2.8. Timing Diagram for Serial CORDIC (Translation Mode)

3. IP Generation, Simulation, and Validation

This section provides information on how to generate the IP Core using the Lattice Radiant software and how to run simulation and synthesis. For more details on the Lattice Radiant software, refer to the Lattice Radiant software user guide.

3.1. Generating the IP

The Lattice Radiant software allows the user to customize and generate modules and IPs and integrate them into the device’s architecture. The procedure for generating the CORDIC IP Core in Lattice Radiant software is described below.

To generate the CORDIC IP Core:

1. Create a new Lattice Radiant software project or open an existing project.
2. In the **IP Catalog** tab, double-click on **CORDIC** under **IP, DSP** category. The **Module/IP Block Wizard** opens as shown in [Figure 3.1](#). Enter values in the **Component name** and the **Create in** fields and click **Next**.

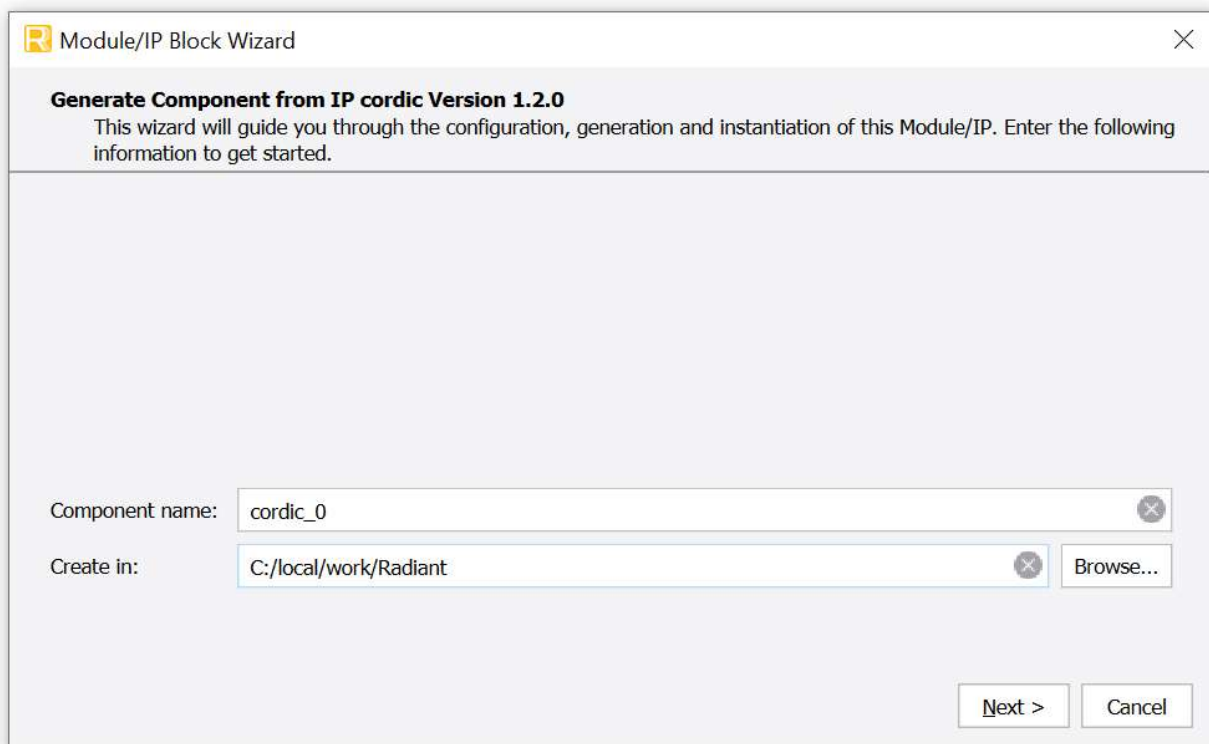


Figure 3.1. Module/IP Block Wizard

3. In the module’s dialog box of the **Module/IP Block Wizard** window, customize the selected CORDIC IP Core using drop-down menus and check boxes. As a sample configuration, see [Figure 3.2](#). For configuration options, see [Table 2.6](#).

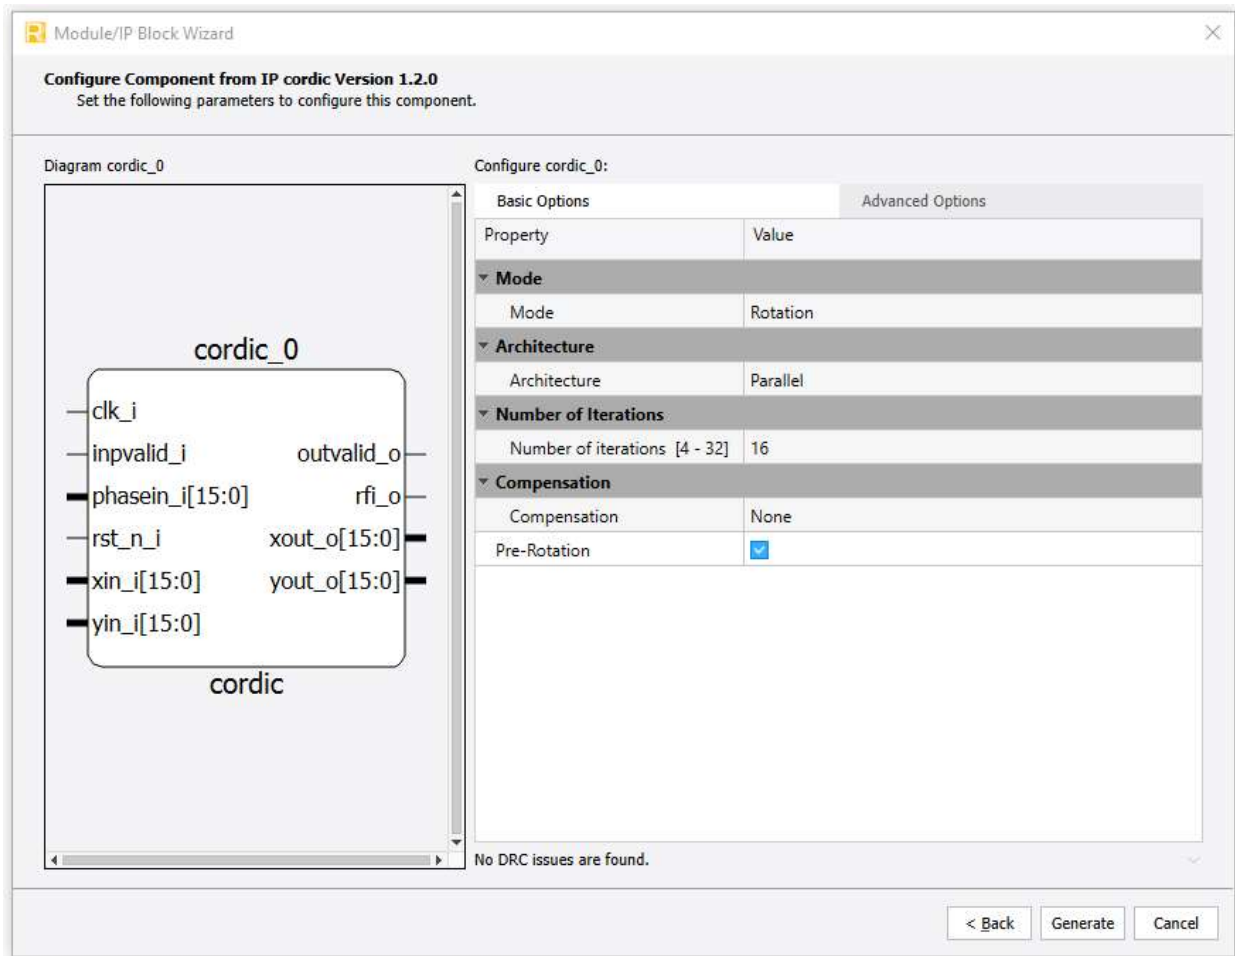


Figure 3.2. Configure User Interface of CORDIC IP Core

4. Click **Generate**. The **Check Generating Result** dialog box opens, showing design block messages and results as shown in Figure 3.3.

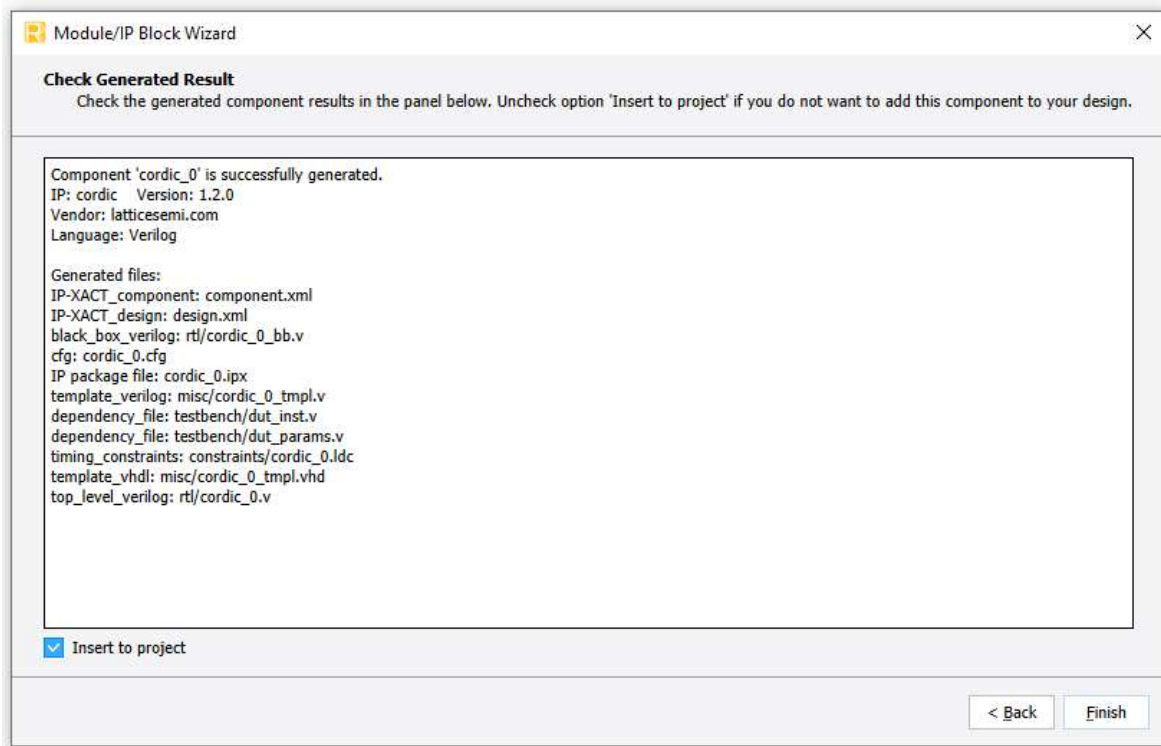


Figure 3.3. Check Generating Result

5. Click the **Finish** button. All the generated files are placed under the directory paths in the **Create in** and the **Component name** fields shown in [Figure 3.1](#).


The generated CORDIC IP Core package includes the black box (<Component name>_bb.v) and instance templates (<Component name>_tmpl.v/vhd) that can be used to instantiate the core in a top-level design. An example RTL top-level reference source file (<Component name>.v) that can be used as an instantiation template for the IP core is also provided. The user may also use this top-level reference as the starting template for the top-level for their complete design. The generated files are listed in [Table 3.1](#).

Table 3.1. Generated File List

| Attribute | Description |
|---|---|
| <Component name>.ipx | This file contains the information on the files associated to the generated IP. |
| <Component name>.cfg | This file contains the parameter values used in IP configuration. |
| component.xml | Contains the ipxact:component information of the IP. |
| design.xml | Documents the configuration parameters of the IP in IP-XACT 2014 format. |
| rtl/<Component name>.v | This file provides an example RTL top file that instantiates the IP core. |
| rtl/<Component name>_bb.v | This file provides the synthesis black box. |
| misc/<Component name>_tmpl.v misc /<Component name>_tmpl.vhd | These files provide instance templates for the IP core. |

3.2. Running Functional Simulation

To run functional simulation:

1. Click the  button located on the **Toolbar** to initiate the **Simulation Wizard** shown in [Figure 3.4](#).

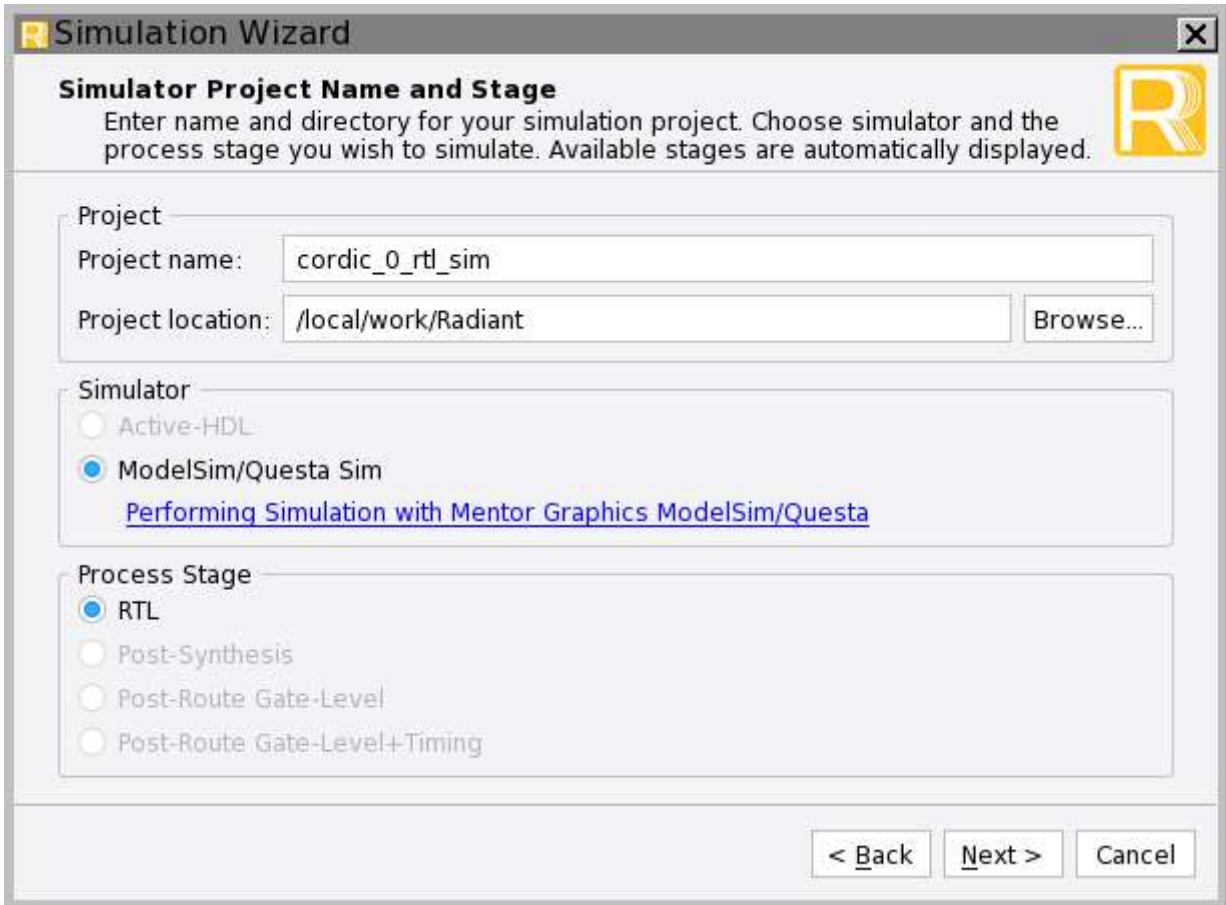


Figure 3.4. Simulation Wizard

2. Click **Next** to open the **Add and Reorder Source** window as shown in [Figure 3.5](#).

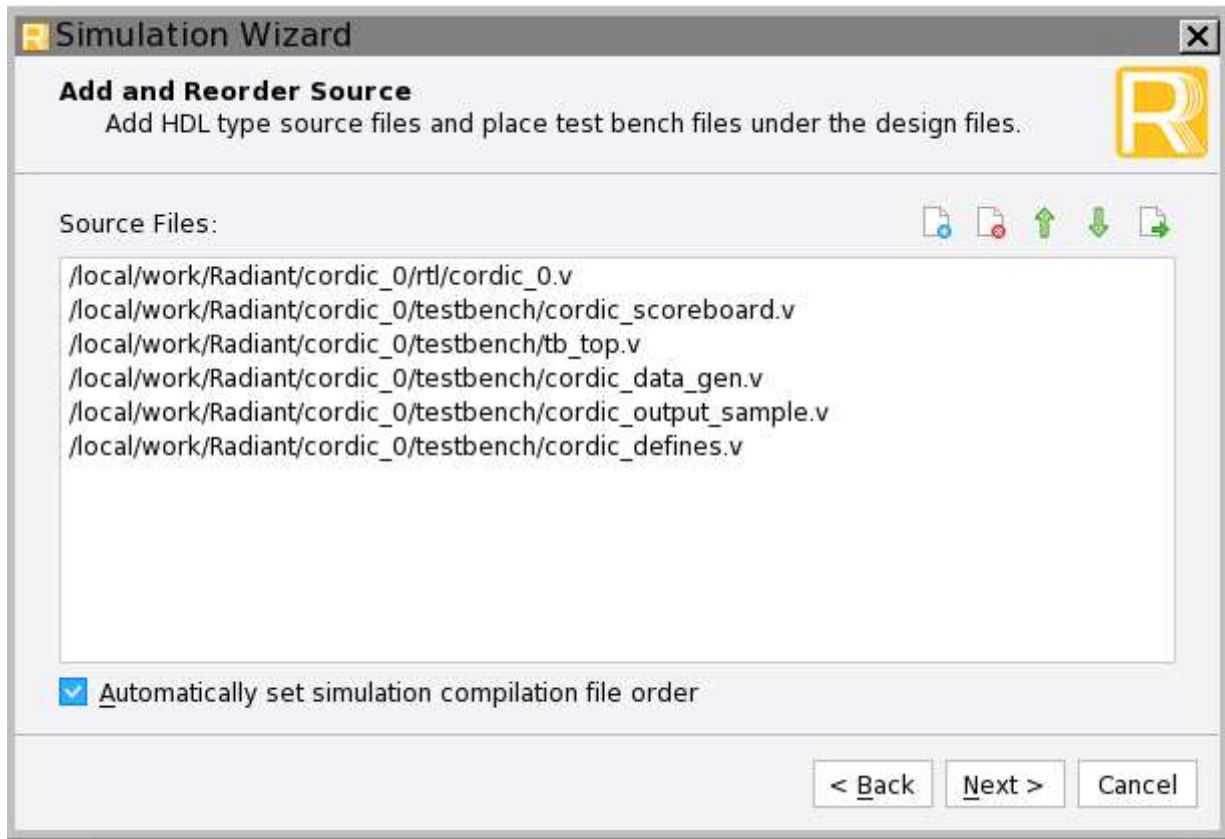


Figure 3.5. Adding and Reordering Source

3. Click **Next**. The **Summary** window is shown. Click **Finish** to run the simulation.

Note: It is necessary to follow the procedure above until it is fully automated in the Lattice Radiant software suite. The results of the simulation in our example are provided in [Figure 3.6](#).

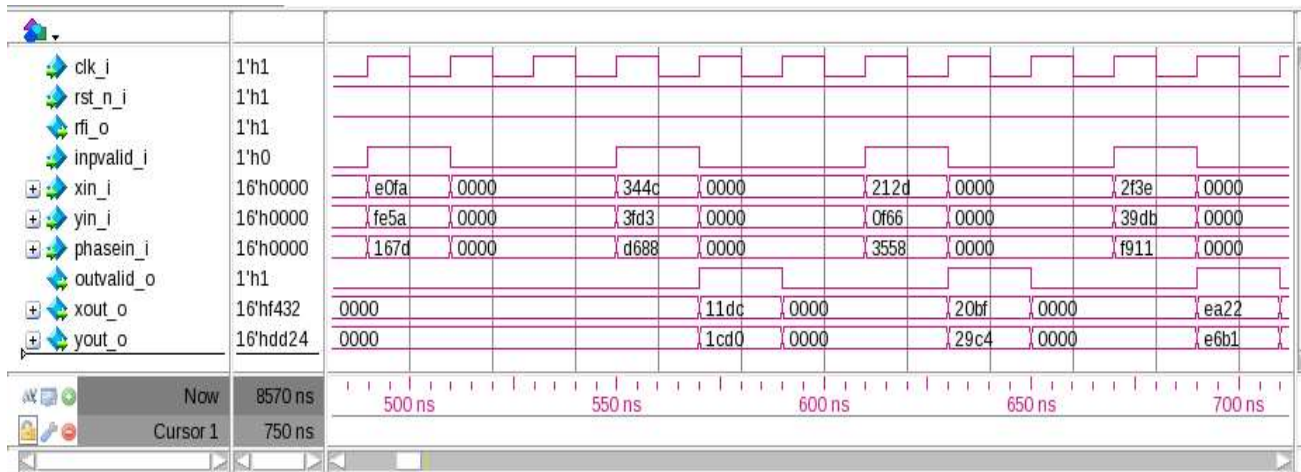


Figure 3.6. Simulation Waveform

3.3. IP Evaluation

The IP Core supports Lattice’s IP evaluation capability when used in the supported FPGA family and targeted device. This makes it possible to create versions of the IP core that operates in hardware for a limited period of time (approximately four hours) without requiring the purchase of an IP license. The IP evaluation capability may be enabled/disabled in the Strategy dialog box. It is enabled by default. To change this setting, go to Project > Active Strategy > LSE/Synplify Pro Settings.

4. Ordering Part Number

The Ordering Part Number (OPN) for this IP Core are the following:

- CORDIC-CNX-U – CORDIC for CrossLink-NX - Single Design License
- CORDIC-CNX-UT – CORDIC for CrossLink-NX - Site License
- CORDIC-CNX-US - CORDIC for CrossLink-NX - 1 Year Subscription License
- CORDIC-CTNX-U – CORDIC for Certus-NX - Single Design License
- CORDIC-CTNX-UT – CORDIC for Certus-NX - Site License
- CORDIC-CTNX-US – CORDIC for Certus-NX - 1 Year Subscription License
- CORDIC-CPNX-U – CORDIC for CertusPro-NX – Single Design License
- CORDIC-CPNX-UT – CORDIC for CertusPro-NX – Site License
- CORDIC-CPNX-US – CORDIC for CertusPro-NX - 1 Year Subscription License
- CORDIC-XO5-U – CORDIC for MachXO5-NX - Single Design License
- CORDIC-XO5-UT – CORDIC for MachXO5-NX - Site License
- CORDIC-XO5-US – CORDIC for MachXO5-NX - 1 Year Subscription License
- CORDIC-AVE-U – CORDIC for Avant-E - Single Design License
- CORDIC-AVE-UT – CORDIC for Avant-E - Site License
- CORDIC-AVE-US – CORDIC for Avant-E - 1 Year Subscription License

Appendix A. Resource Utilization

Table A.1 shows the resource utilization of the CORDIC IP Core for the LIFCL-40-9BG400I device using Synplify Pro of Lattice Radiant software. Default configuration is used, and some attributes are changed from the default value to show the effect on the resource utilization.

Table A.1. Resource Utilization

| Configuration | CLK Fmax (MHz)* | Registers | LUTs | DSP |
|--|-----------------|-----------|------|-----|
| Default | 200 | 1157 | 1334 | 0 |
| Mode: Translation, Others = Default | 200 | 1145 | 1320 | 0 |
| Mode: Sin/Cos, Others = Default | 200 | 1003 | 1146 | 0 |
| Architecture= Word-Serial, Others = Default | 200 | 302 | 585 | 0 |
| Compensation: DSP-based, Others = Default | 200 | 1242 | 1311 | 8 |

*Note: Fmax is generated when the FPGA design only contains CORDIC IP Core, and the target frequency is 100 MHz. These values may be reduced when user logic is added to the FPGA design.

Table A.2 shows the resource utilization of the CORDIC IP Core for the LFD2NX-40-9BG256I device using Synplify Pro of Lattice Radiant software. Default configuration is used, and some attributes are changed from the default value to show the effect on the resource utilization.

Table A.2. Resource Utilization

| Configuration | CLK Fmax (MHz)* | Registers | LUTs | DSP |
|---|-----------------|-----------|------|-----|
| Default | 200 | 1157 | 1334 | 0 |
| Mode: Translation, Others = Default | 200 | 1145 | 1320 | 0 |
| Mode: Sin/Cos, Others = Default | 200 | 1003 | 1146 | 0 |
| Mode: Arctan, Others = Default | 200 | 302 | 585 | 0 |
| Compensation: DSP-based, Rounding Method: Convergent, Synchronous Reset: true, Clock Enable: true, Others = Default | 200 | 1242 | 1311 | 8 |

*Note: Fmax is generated when the FPGA design only contains CORDIC IP Core, and the target frequency is 100 MHz. These values may be reduced when user logic is added to the FPGA design.

Table A.3 shows the resource utilization of the CORDIC IP Core for the LFMXO5-25-9BBG400I device using Synplify Pro of Lattice Radiant Software. Default configuration is used, and some attributes are changed from the default value to show the effect on the resource utilization.

Table A.3. Resource Utilization

| Configuration | Clk Fmax (MHz)* | Registers | LUTs | DSP |
|---|-----------------|-----------|------|-----|
| Default | 200 | 1157 | 1334 | 0 |
| Mode: Translation, Others = Default | 200 | 1145 | 1320 | 0 |
| Mode: Sin/Cos, Others = Default | 200 | 1003 | 1146 | 0 |
| Mode: Arctan, Others = Default | 200 | 1072 | 1276 | 0 |
| Compensation: DSP-based, Rounding Method: Convergent, Synchronous Reset: true, Clock Enable: true, Others = Default | 197 | 1437 | 2621 | 8 |

*Note: Fmax is generated when the FPGA design only contains CORDIC IP Core, and the target frequency is 100MHz. These values may be reduced when user logic is added to the FPGA design.

Table A.4 shows the resource utilization of the CORDIC IP Core for the LFMXO5-25-7BBG400I device using Synplify Pro of Lattice Radiant Software. Default configuration is used, and some attributes are changed from the default value to show the effect on the resource utilization.

Table A.4. Resource Utilization

| Configuration | Clk Fmax (MHz)* | Registers | LUTs | DSP |
|---|-----------------|-----------|------|-----|
| Default | 145 | 1157 | 1334 | 0 |
| Mode: Translation, Others = Default | 156 | 1145 | 1320 | 0 |
| Mode: Sin/Cos, Others = Default | 153 | 1003 | 1146 | 0 |
| Mode: Arctan, Others = Default | 158 | 1072 | 1276 | 0 |
| Compensation: DSP-based, Rounding Method: Convergent, Synchronous Reset: true, Clock Enable: true, Others = Default | 160.694 | 1437 | 2621 | 8 |

*Note: Fmax is generated when the FPGA design only contains CORDIC IP Core, and the target frequency is 100MHz. These values may be reduced when user logic is added to the FPGA design.

Table A.5 shows the resource utilization of the CORDIC IP Core for the LAV-AT-500E-1LFG1156I device using Synplify Pro of Lattice Radiant Software. Default configuration is used, and some attributes are changed from the default value to show the effect on the resource utilization.

Table A.5. Resource Utilization

| Configuration | Clk Fmax (MHz)* | Registers | LUTs | DSP |
|---|-----------------|-----------|------|-----|
| Default | 201.45 | 1165 | 1710 | 0 |
| <i>Mode: Translation,</i> Others = Default | 201.45 | 1153 | 1458 | 0 |
| <i>Mode: Sin/Cos,</i> Others = Default | 201.45 | 1003 | 1446 | 0 |
| <i>Mode: Arctan,</i> Others = Default | 201.45 | 1080 | 1414 | 0 |
| <i>Compensation: DSP-based,</i> <i>Rounding Method: Convergent,</i> <i>Synchronous Reset: true,</i> <i>Clock Enable: true,</i> Others = Default | 201.45 | 1610 | 3099 | 8 |

***Note:** Fmax is generated when the FPGA design only contains CORDIC IP Core, and the target frequency is 200MHz. These values may be reduced when user logic is added to the FPGA design.

References

- [CrossLink-NX FPGA Web Page at www.latticesemi.com](http://www.latticesemi.com)
- [Certus-NX FPGA-Web Page at www.latticesemi.com](http://www.latticesemi.com)
- [CertusPro-NX FPGA Web Page at www.latticesemi.com](http://www.latticesemi.com)

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

Revision History

Revision 1.3, November 2022

| Section | Change Summary |
|---|---|
| Introduction | Added Lattice Avant and LAV-AT-500E to Table 1.1. Quick Facts . |
| Functional Description | Signal Description , Attribute Summary , and Configuring the CORDIC IP Core sections are moved to under Section 2. |
| IP Generation, Simulation, and Validation | <ul style="list-style-type: none"> Updated the heading of Section 3 from “IP Generation and Evaluation” to “IP Generation, Simulation, and Validation”. Removed “Licensing the IP” section. Updated the heading of Section 3.1 from “Generation and Synthesis” to “Generating the IP”. Updated the heading of Section 3.3 from “Hardware Evaluation” to “IP Evaluation”. Updated the Section 3.3 from <i>The CORDIC IP Core supports Lattice’s IP hardware evaluation capability when used with CrossLink-NX and Certus-NX devices. This makes it possible to create versions of the IP core that operate in hardware for a limited period of time (approximately four hours) without requiring the purchase of an IP license. It may also be used to evaluate the core in hardware in user-defined designs. The hardware evaluation capability may be enabled/disabled in the Strategy dialog box. It is enabled by default. To change this setting, go to Project > Active Strategy > LSE/Synplify Pro Settings.</i> to <i>The IP Core supports Lattice’s IP evaluation capability when used in the supported FPGA family and targeted device. This makes it possible to create versions of the IP core that operates in hardware for a limited period of time (approximately four hours) without requiring the purchase of an IP license. The IP evaluation capability may be enabled/disabled in the Strategy dialog box. It is enabled by default. To change this setting, go to Project > Active Strategy > LSE/Synplify Pro Settings.</i> |
| Resource Utilization | <ul style="list-style-type: none"> Updated Table A.1. Resource Utilization and Table A.2. Resource Utilization. Added Table A.3. Resource Utilization, Table A.4. Resource Utilization, and Table A.5. Resource Utilization. |
| Ordering Part Number | <ul style="list-style-type: none"> Added CNX-US, CPNX-US, CTNX-US, and Avant-E part numbers. |

Revision 1.2, May 2022

| Section | Change Summary |
|---|---|
| Disclaimers | Updated. |
| Introduction | Added MachXO5-NX device support to Table 1.1. Quick Facts . |
| Core Generation, Simulation, and Validation | Updated Figure 4.1. Module/IP Block Wizard , Figure 4.2. Configure User Interface of CORDIC IP Core , and Figure 4.3. Check Generating Result to reflect the most recent IP CORDIC version 1.2. |
| Ordering Part Number | Added MachXO5-NX OPNs. |
| Resource Utilization | Updated description and data for Table A.1. Resource Utilization and Table A.2. Resource Utilization to reflect the support for MachXO5-NX family. |

Revision 1.1, June 2021

| Section | Change Summary |
|---------------------------|---|
| Acronyms in This Document | Added this section. |
| Introduction | Updated content, including Table 1.1 to add CertusPro-NX support. |
| Ordering Part Number | Added part number for CertusPro-NX. |
| References | Updated this section to add CertusPro-NX web page. |

Revision 1.0, October 2020

| Section | Change Summary |
|---------|------------------|
| All | Initial release. |



www.latticesemi.com